


# INSTALLATION GUIDE

## - Shelving unit FUR0 931



### OVERVIEW

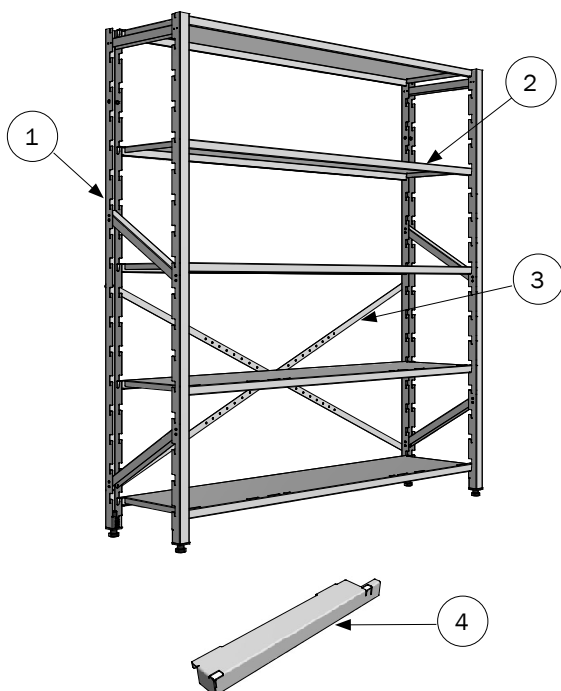

|          |            |          |                 |
|----------|------------|----------|-----------------|
| <b>1</b> | Side frame | <b>3</b> | Cross brace     |
| <b>2</b> | Shelf      | <b>4</b> | Corner bracket* |

\* Only when assembling a corner shelving unit.


### ASSEMBLY

#### TOOLS REQUIRED FOR ASSEMBLY:

- Screwdriver

#### FOLLOW THE STEPS BELOW TO ASSEMBLE THE SHELVING UNIT:

1. Place the side frames (1) in an upright position and hook the shelves (2) into the slots in the side frames.

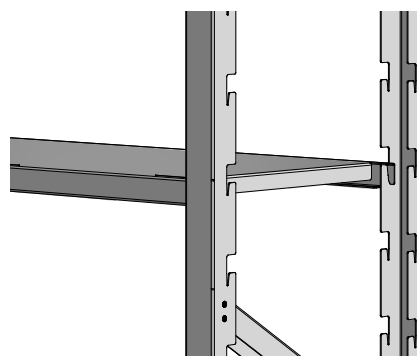

#### IMPORTANT!


Make sure that the rivet nuts attached to the side frames are facing towards the rear of the shelving unit. The cross brace will later be fastened to these rivet nuts.

#### TIP!

Start with the top and bottom shelves for stability during the assembly.


#### NOTE

Shelves with a high back edge have a brace that shall be installed before the shelf is put in place.

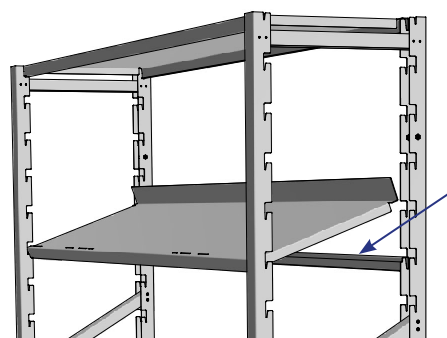




2. Screw the cross brace (3) into the rivet nuts at the rear of the shelving unit.

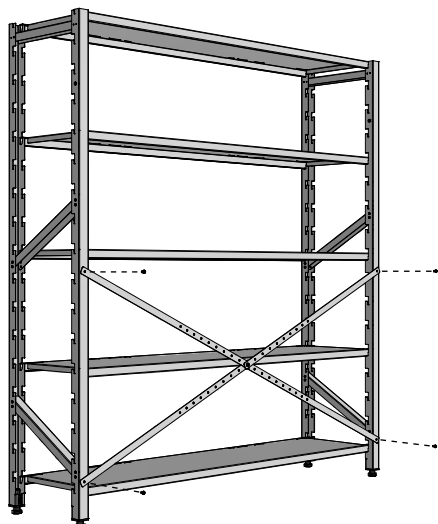

#### Assembly of corner brackets\*:

- 3.\* Attach the corner brackets (4) to the shelves at the point where the corner shelf is to be connected. Hook the adjoining shelves into place.

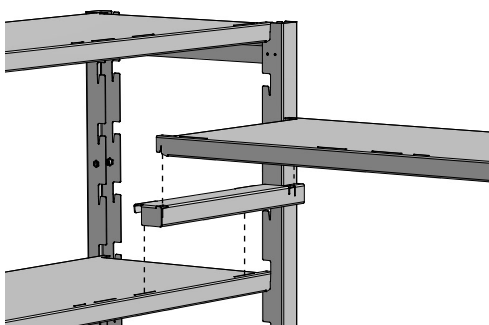

#### NOTE

*Only three side frames are required for a corner shelving unit.*

\*Only when assembling a corner shelving unit.