


INSTALLATION GUIDE

Wall-mounted urinal FR 602

- A** Fasten the brackets to the wall.
The low bracket should be positioned at the drain end of the urinal and the high bracket at the opposite end (stainless steel screws are available as an accessory).
Place the brackets approximately 150 mm from each end of the urinal. Recommended installation height, when used by adults, is 650 mm from the floor to the raised front rim of the urinal. To ensure the recommended installation height, the top hole of each bracket shall be positioned 500 mm above the floor.
- B** Mount the urinal and make sure that it is level.
If necessary, adjust the position of the brackets using the slotted screw holes. If the urinal is longer than 2.4 m, 1-2 middle brackets are included. These can be installed at any suitable position along the length of the urinal, after the end panel brackets and the urinal has been set in place.
- C** Mark the mounting holes for the splash guard.
Drill holes for screws or wall plugs.
The water distribution pipe, together with its cover plate, should be fastened using the same screw as the splash guard at the top of the urinal (torx screws RTS 4.2 x 32 and wall plugs are included).
- D** Connect the water supply to the water distribution pipe DN 15.
- E** Connect the outlet pipe and trap (accessory) to the urinal outlet DN 40.

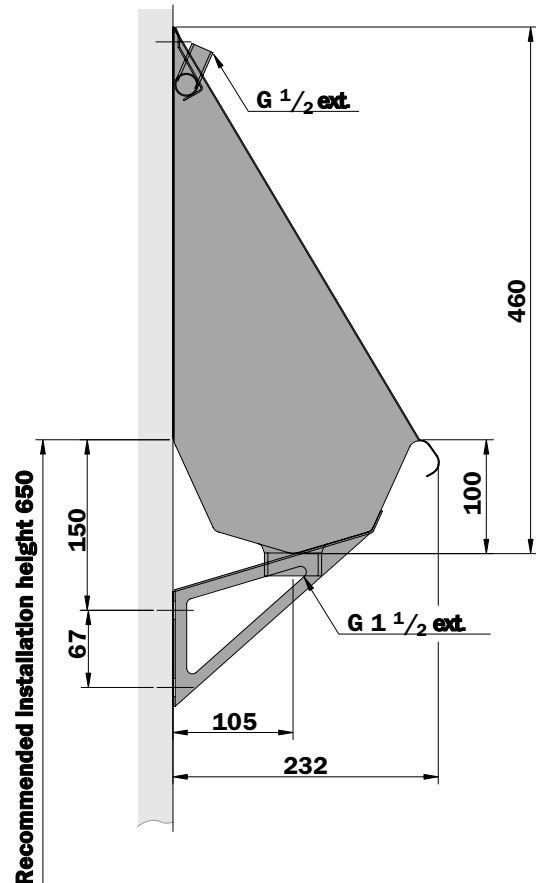

Number of brackets:

- 2 brackets: L = 400 – 2400 mm
- 3 brackets: L = 2500 – 3700 mm
- 4 brackets: L = 3800 – 5900 mm